

**Sierra Series 670  
Digital Flow  
Averaging Array**  
Including the 920 Collector-Box™

March 1996

REV. B  
Part Number: IM-67-CEMS

**SIERRA**  
INSTRUMENTS, INC.

5 Harris Court, Building L · Monterey, CA 93940  
(408) 373-0200 · (800) 866-0200 · Fax (408) 373-4402

SIERRA INSTRUMENTS b.v. · Bolstoen 30A · 1046 AV Amsterdam · The Netherlands  
31(0)20-6145810 · Fax 31(0)20-6145815

© COPYRIGHT SIERRA INSTRUMENTS 1994

No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, manual, or otherwise, or disclosed to third parties without the express written permission of Sierra Instruments. The information contained in this manual is subject to change without notice.

## **TRADEMARKS**

Collector-Box™, Probe-Box™, Digi-Bridge™, Auto-Self Clean™, Steel-Trak™, and FR™ (sensors) are trademarks of Sierra Instruments, Incorporated.

## **RECEIPT OF YOUR FLOW AVERAGING ARRAY**

When you receive your Series 670 Digital Flow Averaging Array, carefully check the outside packing carton for damage incurred during shipment. If the packing carton is damaged, you should notify the local carrier at once regarding their liability. You should also submit a report to Sierra Instruments Customer Service at the address or phone shown below.

Remove the packing slip from its envelope and check that the carton contains all parts listed. Make sure you do not discard any spare parts or accessories with the packing material. If there are shortages in the shipment, inform Sierra Instruments Customer Service at the address or phone shown below.

**Sierra Instruments Customer Service**  
**5 Harris Court, Building L**  
**Monterey, CA 93940**  
**(408) 373-0200 (Phone)**  
**(800) 866-0200 (Phone)**  
**(408) 373-4402 (Fax)**

## **CUSTOMER CAUTION**

### **RE: OXYGEN SERVICE**

Sierra Instruments, Inc. is not liable for any damage or personal injury, whatsoever, resulting from the use of Sierra Instruments mass flow meters or controllers for oxygen gas. Although Sierra does clean its mass flow meters and controllers prior to shipment, we make no claim or warranty that their cleanliness renders them safe for oxygen service. The customer must clean Sierra Instruments mass flow meters or controllers to the degree that they require for their oxygen flow applications.



<b>1</b>	<b>Overview</b> . . . . .	<b>1</b>
	1.1 About the Operators Manual . . . . .	1
<b>2</b>	<b>Principles Of Operation</b> . . . . .	<b>3</b>
<b>3</b>	<b>Installation</b> . . . . .	<b>5</b>
	3.1 Mounting of Probes and Probe-Boxes . . . . .	5
	3.2 Access to Field Wiring . . . . .	7
	3.3 Power Supply Wiring . . . . .	11
	3.3.1 100/115/230 VAC 50/60 Hz Input Power . . . . .	11
	3.3.2 24 VDC Input Power . . . . .	12
	3.4 Remote Probe Wiring (350 feet maximum) . . . . .	13
	3.5 Signal Wiring . . . . .	13
	3.5.1 0-5 VDC and 4-20mA Outputs . . . . .	14
	3.5.2 RS-485 Interface . . . . .	14
<b>4</b>	<b>Operating Instructions</b> . . . . .	<b>17</b>
	4.1 General Description . . . . .	17
	4.2 Probe-Box Motherboard LEDs . . . . .	17
	4.3 Controller Board LEDs . . . . .	17
	4.4 Calibration Voltage Output Switch, SW1 . . . . .	18
	4.5 Output Select Jumper (JB4) . . . . .	18
	4.6 Digi-Bridge Board Outputs . . . . .	18
<b>5</b>	<b>Monitoring Total Flow Rate</b> . . . . .	<b>19</b>
	5.1 Stack and Flue Monitoring . . . . .	21
<b>6</b>	<b>Calculating Actual Flow Rate</b> . . . . .	<b>23</b>
<b>7</b>	<b>System Maintenance</b> . . . . .	<b>25</b>

7.1	Access to Electronics PCAs . . . . .	25
7.2	Totalizer Back-up Battery . . . . .	25
7.3	Probe Cleaning . . . . .	25
7.4	Probe Breakage or Damage . . . . .	25
7.5	Replacing Sensors . . . . .	26
7.5.1	Required Tools and Supplies . . . . .	26
7.5.2	Sensor Replacement Procedure . . . . .	26
<b>8</b>	<b>Collector-Box Installation . . . . .</b>	<b>31</b>
8.1	Mounting the Collector-Box . . . . .	31
8.2	Access to Field Wiring . . . . .	31
8.3	100/115/230 VAC Input Power . . . . .	31
8.4	Signal Wiring . . . . .	32
8.4.1	RS-485 Interface to Probe-Boxes . . . . .	33
8.4.2	0-5 VDC and 4-20mA Output . . . . .	34
8.4.3	Relay Outputs . . . . .	34
<b>9</b>	<b>System Configuration . . . . .</b>	<b>37</b>
9.1	Powering Up the Collector-Box . . . . .	37
9.2	Configuring the System . . . . .	37
9.2.1	Duct Area . . . . .	38
9.2.2	K-factor . . . . .	38
9.2.3	Reference Temperature . . . . .	39
9.2.4	Gas Density . . . . .	39
9.2.5	Analog Outputs . . . . .	39
9.2.6	Digital to Analog Converter Full Scale . . . . .	40
9.2.7	High/Low Flow Alarm Setpoints (Optional) . . . . .	40
9.2.8	Totalizer Alarm Setpoint (Optional) . . . . .	41

9.2.9	Programmable Kickout Flow . . . . .	41
9.2.10	Storing Setup and Checking Network . . . . .	42
9.3	Hidden Configuration Parameters . . . . .	42
9.3.1	Entering Setup Code and Storing System Configuration . . . . .	42
9.4	Diagnostics . . . . .	43
9.5	F1 Function Key . . . . .	44
9.6	F2 Function Key . . . . .	44
9.6.1	Creating Bias Factors . . . . .	44
9.6.2	Checking the Bias Factors . . . . .	45
9.7	F3 Function Key . . . . .	45
9.8	F4 Function Key . . . . .	46
<b>10</b>	<b>Normal Operation . . . . .</b>	<b>47</b>
10.1	Flow Display . . . . .	47
10.1.1	How Flow is Computed and Displayed . . . . .	48
10.2	Totalizer (Optional) . . . . .	49
10.3	Status LEDs . . . . .	49
10.4	0-5 VDC and 4-20mA Output Signals . . . . .	50
10.5	System Alarms . . . . .	50
10.6	Displaying Alarm Setpoints . . . . .	51
10.7	Relay Outputs . . . . .	51
<b>11</b>	<b>Collector-Box Maintenance . . . . .</b>	<b>53</b>
11.1	Access to PCAs . . . . .	53
<b>12</b>	<b>Calibration . . . . .</b>	<b>55</b>
<b>13</b>	<b>Troubleshooting . . . . .</b>	<b>57</b>
<b>14</b>	<b>Sierra Repair . . . . .</b>	<b>59</b>
<b>A</b>	<b>Specifications . . . . .</b>	<b>61</b>

<b>B</b>	<b>RS-485 Probe-Box Interface Bus . . . . .</b>	<b>63</b>
<b>C</b>	<b>Collector-Box Emulator Software . . . . .</b>	<b>65</b>
	Overview . . . . .	65
	Hardware Requirements . . . . .	65
	RS-485 Interface Card . . . . .	65
	RS-485 Interface Adapter . . . . .	66
	Installing the Software . . . . .	67
	Using the Software . . . . .	68
	Main Menu Options . . . . .	68
	Menu Option T . . . . .	69
	Menu Option P . . . . .	70
	The PC Collector-Box Menu . . . . .	71
	Menu Option S . . . . .	73
	Menu Option Q . . . . .	73
	Upgrading the Software . . . . .	73
	Parts of the Emulator Software . . . . .	73
	Parts of the Microprocessor Software . . . . .	74
	Upgrading the Microprocessor Software . . . . .	74
	Communications Mode Selection . . . . .	75
<b>D</b>	<b>Controller Board LEDs . . . . .</b>	<b>77</b>
<b>E</b>	<b>Digi-Bridge Board Critical Component Locations . . . . .</b>	<b>79</b>
<b>F</b>	<b>Controller Board Critical Component Locations . . . . .</b>	<b>81</b>
<b>G</b>	<b>Probe-Box Motherboard Critical Component Locations . . . . .</b>	<b>83</b>
<b>H</b>	<b>Collector-Box Motherboard Critical Component Locations . . . . .</b>	<b>85</b>

Figure 1	The Sierra Thermal Principle . . . . .	3
Figure 2	Proper Probe Orientation . . . . .	6
Figure 3	Typical System Field Wiring Diagram . . . . .	8
Figure 4	Sensor Terminal Strip Wiring Diagram A . . . . .	9
Figure 5	Sensor Terminal Strip Wiring Diagram B . . . . .	9
Figure 6	Probe Head Terminal Strip Layout . . . . .	10
Figure 7	Digi-Bridge Board Sensor Wiring . . . . .	10
Figure 8	Equal Area Traverse for Round Ducts Larger Than 6-inch Diameter . . . . .	23
Figure 9	AC Power Input Wiring Terminals . . . . .	32
Figure 10	Signal Wiring . . . . .	32
Figure 11	Collector-Box Relay Outputs . . . . .	34
Figure 12	Locating the Collector-Box Latch . . . . .	53
Figure 13	Releasing the Collector-Box Latch and Opening the Display Panel . . . . .	53
Figure 14	The Power Supply Fuses . . . . .	54
Figure 15	115 VAC vs. 230 VAC Fuses . . . . .	54
Figure 16	RS-485 Interface Adapter Using 25-pin D Shell Serial Port . . . . .	66
Figure 17	RS-485 Interface Adapter Using 9-pin D Shell Serial Port . . . . .	67
Figure 18	Main Menu . . . . .	68
Figure 19	Error Screen . . . . .	69
Figure 20	PC Collector-Box Menu . . . . .	70
Figure 21	RS-232 Communications Adapter . . . . .	74
Figure 22	Controller Board Communications Connector and Mini-Jumper . . . . .	75
Figure 23	Digi-Bridge Board Communications Connector and Mini-Jumper . . . . .	75



Table 1	Recommended Wire Gauge (A.W.G.) for 115 (230) VAC Mains Power . . .	12
Table 2	Recommended Wire Gauge (A.W.G.) for 24 VDC Power . . . . .	13
Table 3	Signal Wiring, Series 670 Digital Flow Averaging Array . . . . .	14
Table 4	Minimum Number of EPA Method 1 Monitoring Points . . . . .	21
Table 5	Signal Wiring . . . . .	33
Table 6	Relay Board Terminal Assignments . . . . .	35
Table 7	Collector-Box Screens . . . . .	42
Table 8	Flow Readout Options . . . . .	49
Table 9	Troubleshooting . . . . .	58
Table 10	System Specifications . . . . .	61
Table 11	RS-485 Interface, REV. 1.02 . . . . .	64

