


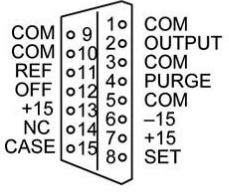

This Quick Start Guide is for the SideTrak 830/840 L, M, and H model meters and controllers. It provides easy setup and installation instructions for proper installation of the 830/840 to ensure flow measurement accuracy.

Instructions:

1. Never test for leaks with liquid leak detector. If liquid seeps into the electronics or the sensor compartment below, the instrument may be damaged. Use a pressure-decay test instead.
2. Install an appropriate in-line filter upstream if the gas contains any particulate matter or condensed moisture. (A 15-micron particulate filter for full-scale flows up to 30 liters/minute is recommended, 30 micron for flows above 30).
3. Mount with a horizontal gas-flow. This orientation is preferable unless the factory calibration was specifically performed for a vertical flow. Consult your calibration certificate. (Horizontal flow is assumed unless vertical flow upward or downward is specified).
4. Do not apply power to the output loop on units equipped and calibrated for a 4-20 ma output signal. This is not a loop-powered device. Damage will occur.
5. Wire the instrument per the diagrams on the back of this card or the operator's manual (Chapter 2). Controllers require a separate ground wire for the valve return signal as well as a setpoint signal (no wire connected to the setpoint may cause the valve to float open).
6. Apply the gas listed on the label to the inlet at the recommended inlet pressure as listed on the calibration certificate. On a meter, obtain this pressure by blocking off the flow downstream. On a controller, confirm that there is no gas flowing through it with a zero setpoint. (If there is a flow, consult the valve adjustment procedure in the manual).
7. Apply power and verify or adjust the zero setting after allowing a 15-minute warm-up period. The zero adjustment potentiometer is accessed through the upper hole in the side of the electronics cover. (See the operator's manual, chapter 3).
8. Do not leave a setpoint applied to a controller when no gas is available to the inlet fitting. The control circuit will apply the maximum voltage to the valve coil resulting in eventual overheating. Damage may occur. (Instead, consult the operator's manual for use of the "valve off" feature).
9. An annual factory evaluation and calibration is recommended.

		
PIN NO.	DESCRIPTION	WIRECOLOR
1	Signal common	Green
2	Output signal	White
3	Power common (valve return)	Violet
4	Purge	Gray
5	Power common	—
6	–15 VDC supply	Orange
7	+15 VDC supply (optional connection)	—
8	Command set point input	Brown
9	Power common	Blue
10	Signal common	Black
11	+5 volt reference	—
12	Valve off	Yellow
13	+15 VDC supply	Red
14	NC	—
15	Chassis ground (shield)	Shield

CASE	1	A	SET
VALVE COM	2	B	COM
V OUT	3	C	COM
+15	4	D	TEST
NC	5	E	NC
+5 V REF	6	F	—15
NC	7	G	NC
+15 (optional)	8	H	+RS-485
4-20	9	I	—RS-485
COM	10	J	VALVE OFF

PIN NO.	DESCRIPTION	830/840 WIRECOLOR	860M/860C WIRECOLOR
1	Chassis ground	Shield	Shield
2	Common, valve return	Violet	Violet
3	Output high	White	White
4	+15 VDC supply	Red	Red
5	No connection	—	—
6	+5 VDC for local set point	—	—
7	Not avail. - connector key	—	—
8	+15 VDC	—	—
9	4-20 mA (for 4-20 mA meters only)	(White)	(White)
10	Common, input low	Gray	—
A	0-5 VDC/4-20 mA set point input	Brown	Brown
B	Common, output low	Black	Black
C	Common, power supply	Blue	—
D	Valve test point (electromagnetic valve)	Green	Green
E	No connection	—	—
F	—15 VDC supply	Orange	Orange
G	Not avail. - connector key	—	—
H	+RS-485	—	Gray
I	—RS-485	—	Blue
J	Valve off	Yellow	Yellow

Note: On Controllers built after 2002, “Valve Return” requires dedicated ground wire back to the power supply common

Limited Warranty Policy- Register Online

All Sierra products are warranted to be free from defects in material and workmanship and will be repaired or replaced at no charge to Buyer, provided return or rejection of product is made within a reasonable period but no longer than one (1) year for calibration and non-calibration defects, from date of delivery. To assure warranty service, customers must register their products online on Sierra’s website. Online registration of all of your Sierra products is required for our warranty process. Register now at www.sierrainstruments.com/register. Learn more about Sierra’s warranty policy at www.sierrainstruments.com/warranty.



Measurably Different.®

Sierra Instruments

North America
20 Ryan Ranch Rd, Suite 109
Monterey, California 93940
+1.831.373.0200 • sierrainstruments.com

Asia
Second Floor Building 5 • Senpu Industrial Park • 25 Hangdu
Road Hangtoun Town • Pu Dong New District • Shanghai, P.R.
China 201316 • +8621 5879 8521/22